 
 
Part #: PT398-33132

Conflicts:

Kit Contents

 




















Service Part #'s

Additional Items

(may be required)

Item#	Description

Recommended Sequence of Application

Item#	Description

Recommended Tools

Personal & Vehicle Protection	Description
Safety Glasses	
Safety Gloves	(Optional)
Vehicle Protection	Blankets, Parts Boxes
Special Tools	
Striker Tool	CAD-E IADS P/N ALL 02-016-01
Installation Tools	
Screwdriver	#2 Phillips, Flat Blade Jeweler's
Nylon Panel Removal Tool	e.g. Panel Pry Tool #1 Toyota SST# 00002-06001-01
Side Cutters	
Pliers	Needle Nose
Socket	10mm, Extension
Torque Wrench	Battery: 48 in•lbf (5.4 N•m),
	Passenger's Knee Airbag : 88.5 in•lbf (10 N•m)
Tape	Clear
Special Chemicals	
Cleaner	VDC Approved Cleaner
Glass Cleaner	Household Glass Cleaner

Table of Contents

PREPARATION

I.	Preparation	1-3
	1. Table of Contents	2
	2. Wire Routing Overview	3
II.	Procedure	4–15
	1. Vehicle Disassembly.	4
	2. V2 ECU Preparation and Installation.	
	3. V2 Harness Installation.	
	4. Microphone Installation.	12
	5. Complete the Installation.	
III.	. Checklist	
	Accessory Function Checks	16
	Vehicle Appearance Check	16
	Vehicle Function Checks	17

Legend



Do not proceed until process has been completed.



Follow steps carefully to avoid damaging the Vehicle or Accessory




Use caution to avoid injury.



Used in Figures to call attention to specific tools recommended for the process.



Highlights a change in installation with respect to previous issue.

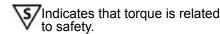



Video available; click to play.



Wire Tie location and number.

Accessory Installation Practice (read before installation)

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.


These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.)
- · Safety (eye protection, checking torque procedure, etc.)
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.)
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.)

Please see your LEXUS dealer for a copy of this document.

PROCEDURE

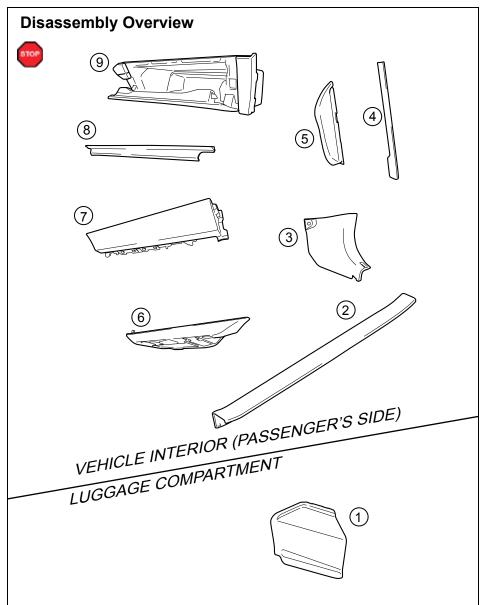

	1	Battery Cover	
	2	PS Step Cover	
	3	PS Cowl Cover	
	4	PS Dash Side Trim	
	5	PS Dash Side Cover	
	6	Glove Box Under Cover	
	7	PS Knee Airbag (Do not disconnect Knee Airbag's connectors)	
	8	Glove Box Trim	
	9	Glove Box	
STOP	Disconnect all Corresponding Connectors.		

1. Vehicle Disassembly.

- a. Place the Vehicle in Park with the Parking Brake set.
- b. Remove the Battery cover from the Passenger's side Luggage Compartment.

GLASS BREAKAGE SENSOR (GBS)

c. Disconnect the Negative

- Battery Terminal. · Note the Battery Cable Position as it will be re-installed in the
- **CAUTION:** Do not touch the Positive Terminal.

same position.

d. Remove the Passenger's Side Step Cover.

- e. Remove the Passenger's Side Cowl Cover.
 - · Remove 1 Nut.

Issue : B 08/22/12 Page 5 of 18

- f. Remove the Passenger's Side Dash Side Trim.
 - Apply Protective Tape on Pry area.

- g. Remove the Passenger's Side Dash Cover.
 - Apply Protective Tape on Pry area.

- h. Dislodge the Glove Box Under Cover.
 - Disconnect Vehicle Connector.

Issue : B 08/22/12

GLASS BREAKAGE SENSOR (GBS)

- Dislodge the Passenger's Knee Airbag carefully.
 - · Remove 3 Bolts.



CAUTION: Do not disconnect the Vehicle's Connector.

j. Wrap the Airbag in a Blanket or the like and place it on top of the TVIP box.



CAUTION: Prevent stress on the Airbag Wire.

k. Remove 2 Screws from the bottom of the Glove Box.

1

Issue : B 08/22/12 Page 7 of 18

- I. Open the Glove Box.
- m. Remove the Glove Box Trim.


- n. Dislodge the Glove Box.
 - · Remove 3 Screws.

- o. Remove the Vehicle's Harness clamp on the top left side of the Glove Box.
 - Rotate Clamp 90° then pull up.
- p. Disconnect the Vehicle's Connectors.
- q. Remove the Glove Box Lamp.
- r. Remove the Glove Box.

Issue : B 08/22/12 Page 8 of 18

PROCEDURE

GLASS BREAKAGE SENSOR (GBS)

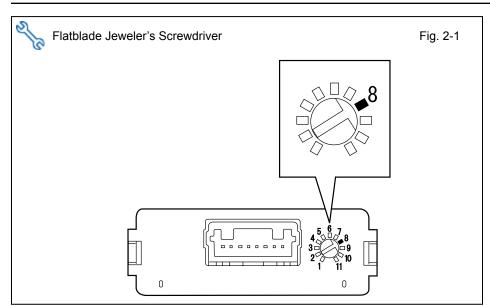

2. V2 ECU Preparation and Installation.

a. Set the GBS Sensitivity Value to "8".



b. Attach the GBS ECU Bracket to the GBS ECU as shown.

 Install the GBS ECU onto the Vehicle Brace using the supplied Bolt and Washer.



NOTE: Make sure the Guide Pin is seated correctly and verify that the Bolt is tightened securely.

3. V2 Harness Installation.

 Plug in the V2 White 8P Connector to the GBS ECU.

b. Connect the V2 Black 5P Connector to the Vehicle's 5P Pre-Connector.

c. Secure the 5P Connectors to the Vehicle Harness using 1 Wire Tie.



VERIFY: That Connectors do not touch the Vehicle Brace.

- d. Secure the V2 Harness to the Vehicle Harness using 1 Wire Tie.
 - Secure Wire Tie 25 mm from the V2 Harness's Branch Point.
 - Rotate the Ratchet End of the Wire Tie as shown.

1

Issue : B 08/22/12 Page 10 of 18

- e. Secure the V2 Harness to the Vehicle Harness using 1 Wire Tie.
 - Rotate the Ratchet End of the Wire Tie as shown.

- f. Secure the V2 Harness to the Vehicle Harness using 1 Wire Tie.
 - Rotate the Ratchet End of the Wire Tie as shown.


g. Secure the V2 Harness's White 2P Connector to the Vehicle Harness using 1 Wire Tie.

Issue : B 08/22/12 Page 11 of 18

PROCEDURE

4. Microphone Installation.


- Partially reassemble the Vehicle.
- NOTE: When reinstalling Knee Airbag, make sure to tighten the Bolts to 88.5 in-lbf (10 N-m).
- VERIFY: That all Connectors are plugged in.
 - **VERIFY:** That Panels fit together properly, with no uneven gaps.

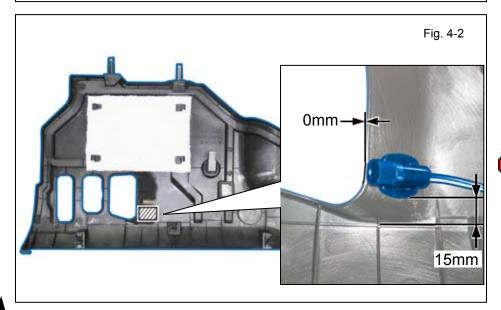

- Using the VDC approved cleaner and Cleaning Method, clean the area indicated on the backside of the Glove Box Under Cover.
- Attach the GBS Microphone to the backside of the Glove Box Under Cover as shown.

NOTE: Make sure to align GBS Microphone to the edge of the Glove Box Under Cover opening.

Issue : B 08/22/12 Page 12 of 18

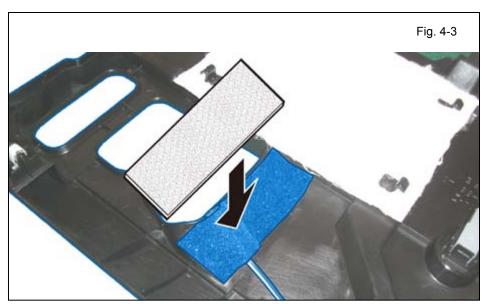

d. Apply 1 Foam Tape to the GBS Microphone as shown.




NOTE: Make sure not to cover the Microphone opening with the Foam Tape.

- e. Connect the V2 White 2P Connector to the Microphone's Connector.
- f. Reconnect the Foot Lamp Connector to the Glove Box Under Cover.

g. Reinstall the Glove Box Under Cover.

1

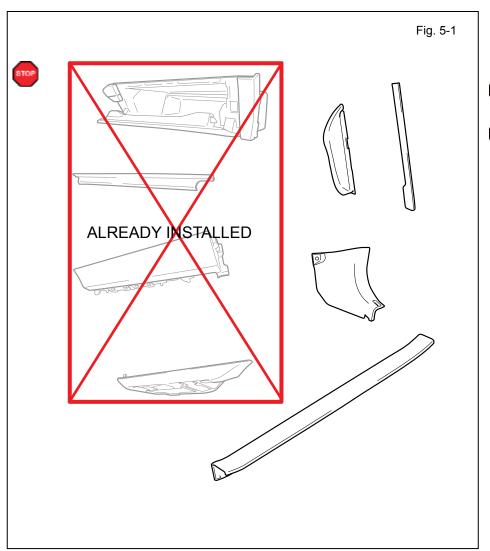

5. Complete the Installation.

 a. Finish reassembling the Vehicle.




VERIFY: That all Connectors are plugged in.



VERIFY: That panels fit together properly, with no uneven gaps.

- b. Clean up and Remove trash.
- Sealed in its protective bag, place the Owner's Manual in the Glove Box.

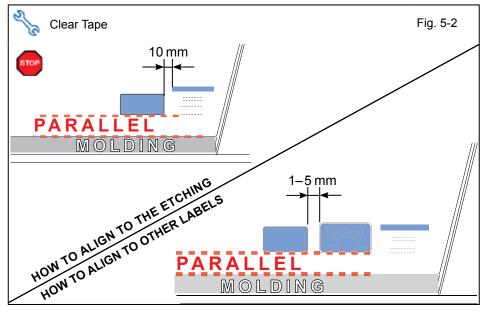

- d. Use Household Glass
 Cleaner to clean the inside
 of the Front Door Windows.
- e. Use a piece of Clear Tape to lift the Label off its protective backing.



CAUTION: Do not touch the adhesive surface.


f. Attach the Label as shown.



NOTE: Make sure to Align the Label according to Etching or Other Label.

REPEAT: steps d-f with the other Window.

GLASS BREAKAGE SENSOR (GBS)

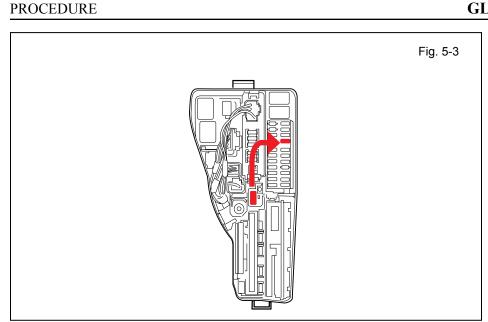

- g. Verify that the Short Pin is installed.
 - If not install now.

h. Position the Negative Battery Cable at the original factory position.



• Tighten the Nut to 48 in•lbf (5.4 N•m)



CAUTION: Do not touch the Positive Terminal.

i. Reinstall the Battery Cover.

Accessory Function Checks

Roll up all windows, and exit the vehicle with the remote.



Take out the Smart Key and the Smart Card Key from the Vehicle. Place them 7 ft. (2 meters) or more away from the Vehicle.

	Perform	Look For	
1	Lock the doors to start the system's arming process.	The turn signal lights flash once. All doors lock. The Security LED lights up.	
2	Wait 30 seconds.	Security LED starts flashing; the system is now armed.	

Perform the following check in a temperature controlled environment (50°- 90°F)

3	With the tip of a key, or Striker Tool pulled all the way out (PPO only), tap the center of the driver's door windows to trigger the alarm.	The horn sounds repeatedly. The headlights flash repeatedly. The turn signal lights flash repeatedly. The Security LED lights up.
4	Insert the key into the driver's door key cylinder and turn it toward the back of the vehicle to stop the alarm.	The horn stops sounding. All the lights stop flashing and/ or turn off. The Security LED lights up.



NOTE: If the alarm does not trigger during functional verifications the Smart Key and Smart Card Key might be too close. Move them farther from the vehicle and test the system again.

NOTE: If the alarm still does not trigger during the section test, increase the GBS sensitivity to the next setting and test again.

NOTE: If you do not disarm the system, the alarm will last 20 seconds. It is not necessary to check the alarm duration.

Vehicle Appearance Check

Perform		Look For	
	After accessory installation and removal of protective cover(s), perform a visual inspection of the vehicle.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)	

CHECKLIST – these points **MUST** be checked to ensure a quality installation.

Vehicle Function Checks

	Function			Function	
En	Enter the Vehicle				
		Dome/Courtesy Lights		Horn	
Sta	art the \	/ehicle			
		Starter		Gauges	
		Panel/Switch Illumination		ABS Light (if equipped) If the warning light remains on, it may indicate a system malfunction.	
		Lamp Failure Sensor If the warning light remains on, it may indicate a system malfunction.		Track/Skid Control Light (if equipped) If the warning light remains on, it may indicate a system malfunction.	
		Seat Belt Warning Light If the warning light remains on, it may indicate a system malfunction.		Tire Pressure Monitoring System (TPMS) Prior to TPMS activation and Pre-delivery Service	
		Air Bag Warning Light If the warning light remains on, it may indicate a system malfunction.		(PDS) of the Vehicle the TPMS light will blink when IG is turned on. After TPMS activation and PDS of the Vehicle the	
		Cruise Control Light (if equipped)		TPMS light will illuminate for a few seconds and go off when IG is turned on.	
Using a Mirror or Assistant check the following.					
		Trunk/Tailgate/Bed Lights (if equipped)		Tail Lights	
		Brake Lights		Daytime Running Lights (if equipped)	
		Backup Lights		Marker Lights	
		Clearance Sonar (if equipped)			
St	Stop the Engine, Place the Vehicle's IG in the ON posi		ion.		
		Hazard Lights		Turn Signal Lights	
		Head Light		Fog Lights (if equipped)	
		High Beams		Accessory Controls/Illumination (if equipped)	
		Power Side Mirrors (if equipped)		Convenience Memory Settings (if equipped)	
		Power Sliding Door (if equipped)		Rear Sunshade (if equipped)	

Issue : B 08/22/12 Page 17 of 18

2013-

TVIP V2

CHECKLIST – these points **MUST** be checked to ensure a quality installation.

GLASS BREAKAGE SENSOR (GBS)

Function		Function		
	Front Wiper/Washer		Rear Wiper/Washer (if equipped)	
	Power Sun/Moon Roof (if equipped)		Rollover Side Curtain Air Bag Switch (RSCA) (if equipped)	
	Clock (if equipped)		Navigation System (if equipped)	
	Audio/Video (if equipped)		HVAC	
	Steering Wheel Audio Control (if equipped)		Steering Wheel Heater (if equipped)	
	Front Windshield Defogger (if equipped)		Rear Window Defogger (if equipped)	
	Blind Spot Monitor (BSM) (if equipped)		Accessory Power Socket (if equipped)	
	Side Mirror Defogger (if equipped)		Heated/Vented Seats (if equipped)	
	Massage Seats (if equipped)		Passenger Air Bag Switch (if equipped)	
	Glove Box Light (if equipped)		Trunk Cancel Switch (if equipped)	
	Power Locks (if equipped)		Power Windows (if equipped)	
	Power Seats (if equipped)		Key Sensor Buzzer	

1

Issue : B 08/22/12 Page 18 of 18