Part Number: PT347-60100

Kit Contents

Item #	Quantity Reqd.	Description
1	1	Cargo Net
2		
3		

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1	N/A	
2		
3		

Additional Items Required For Installation

Item #	Quantity Reqd.	Description
1	N/A	
2		
3		

Conflicts

None

Recommended Tools

Notes	
Notes	
Notes	
Notes	
	Notes Notes

General Applicability

All

Recommended Sequence of Application

Recommended Sequence of Application			
Item #	Accessory		
1			
2			
3			

*Mandatory

NOTE: Part number of this accessory may not be the same as the part number shown.

Vehicle Service Parts (may be required for reassembly)

Ite	em#	Quantity Reqd.	Description
	1		
	2		
	3		

Legend



STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.



CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



<u>TOOLS & EQUIPMENT:</u> Used in Figures calls out the specific tools and equipment recommended for this process.



REVISION MARK: This mark highlights a change in installation with respect to previous issue.



SAFETY TORQUE: This mark indicates that torque is related to safety.

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).

Please see your Lexus dealer for a copy of this document.


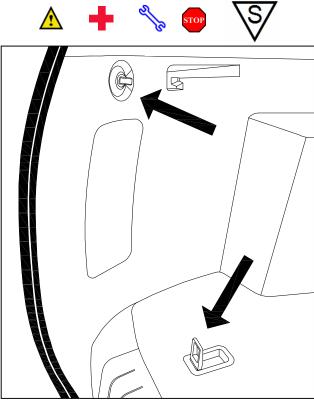



Fig. 1-1

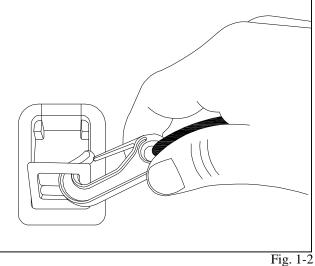

1. Installation of Cargo Net


(a) Open vehicle rear cargo door and locate the vehicle net mounting points on the driver side of the cargo compartment. (Fig. 1-1)

(b) Orient the net so the pull-tab is facing towards the rear of the vehicle and install the bottom hook over the lower D-ring as shown. (Fig 1-2)

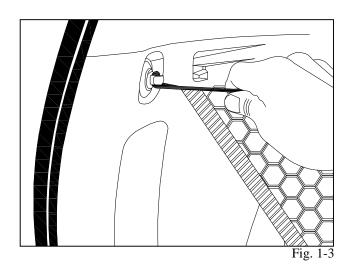

(c) Install the upper bungee loop over the T-anchor as shown. (Fig 1-3). Attachment complete on driver side.

(d) Repeat steps 1(b) & 1(c) for the passenger side of vehicle

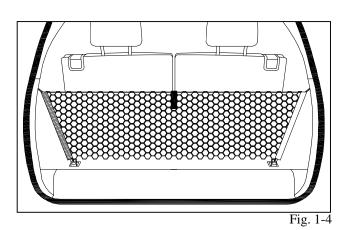

(e) Completed assembly as shown. (Fig 1-4)

LEXUS CARGO NET GX460

Checklist - these points **MUST** be checked to ensure a quality installation. Check: Look For: **Accessory Function Checks** Confirm the net is attached properly to the Make sure the net hooks are attached to the anchor points in the vehicle. lower D-rings and the loops are attached to the T-anchors at the top. Pull Tab orientation Make sure the net's plastic pull tab is facing rearward. **Vehicle Function Checks** Rear cargo door Rear cargo door should open and close freely without interference from cargo net