

Section I – Installation Preparation

Part Number: PT347-53021

Section I – Installation Preparation

Kit Contents

Item #	Quantity Req'd.	Description
1	1	Envelope Net
2	1	Installation Instructions
3	1	Hardware Bag
4	1	Template for RH
5	1	Template for LH

Hardware Bag Contents

Item #	Quantity Req'd.	Description
1	2	T-anchors
2	2	Washers
3	2	M5 Studs
4	2	M5 Wellnuts

Additional Items Required For Installation

Item #	Quantity Req'd.	Description

Conflicts

Note:

Recommended Tools

Safety Tools	
Safety Glasses	
Special Tools	
Installation Tools	
Power Drill	
Drill Bit	9 mm (3/8")
Masking Tape	
Special Chemicals	
None	

General Applicability






Note: IS 300 SportCross only

Recommended Sequence of Application

Item #	Accessory	
1		
2		
3		


*Mandatory


Legend


	STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
	OPERATOR SAFETY: Use caution to avoid risk of injury
	CRITICAL PROCESS: Proceed with caution to ensure a quality installation.
	GENERAL PROCESS: This highlights specific processes to ensure a quality installation.
	TOOLS & EQUIPMENT: This calls out the specific tools and equipment required for this process


Section II – Installation Procedure

A. Anchor Installation

-  1. Open rear cargo door, locate and remove left and right carpet trim panels at the rear of the trunk. (Fig. A-1)

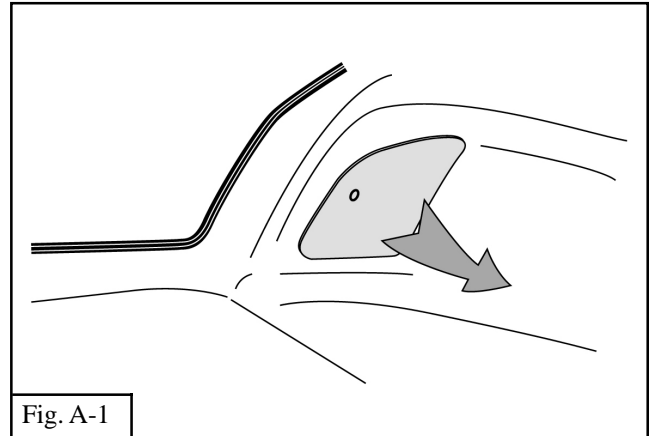


-  2. Cut out paper templates. Align Left hand template where left side carpet trim panel was and tape into place. (Fig A-2)

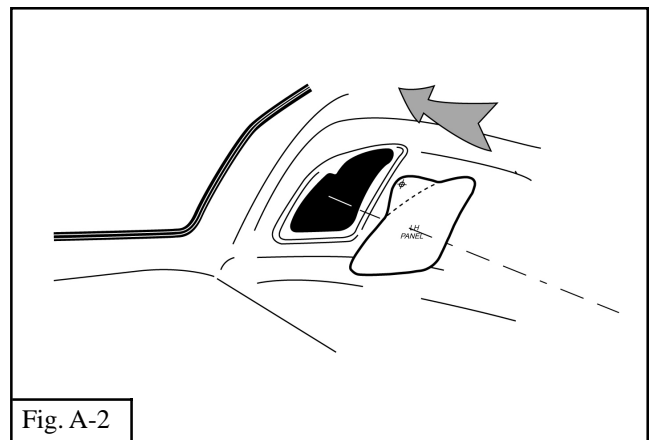


-  i. Drill a 9 mm hole through the sheet metal as indicated by the template. (Fig A-3)



- ii. Remove template and replace panel.


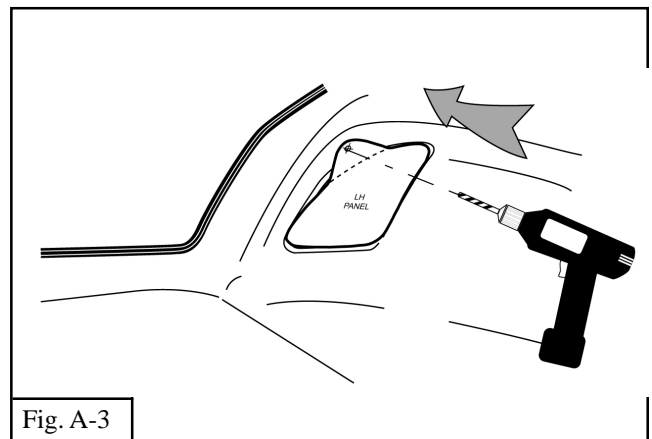


- 3. Repeat step 2 for other side of the vehicle using Right hand template.


 4. Assemble T-Anchor, M5 studs, washers and wellnuts as shown. (Fig. A-4)




- i. Insert T-Anchor Assemblies into drilled holes. (Fig. A-5)
- ii. Tighten the T-Anchor by pressing firmly and twisting in a clock-wise direction until secure. (Fig. A-5)

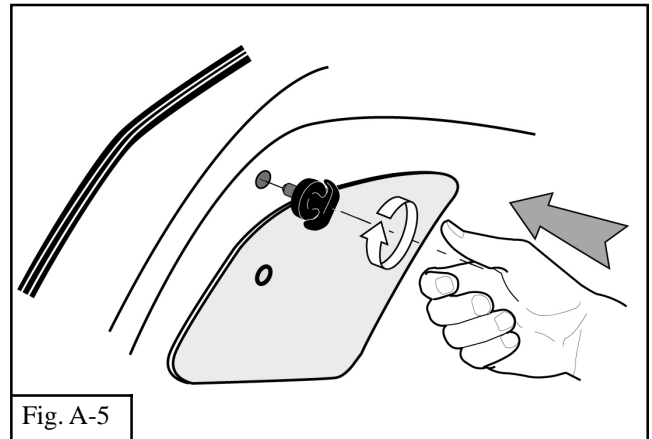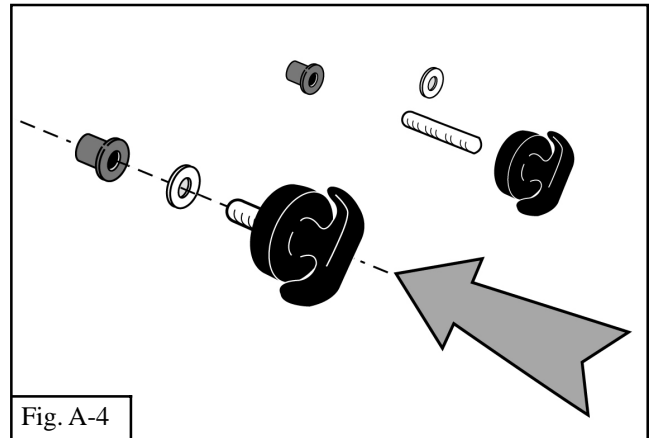

B. Attach Net

 1. Install the cargo net by attaching the loops to the T-Anchors, making sure the plastic handle faces the rear of the vehicle. (Fig. B-1)

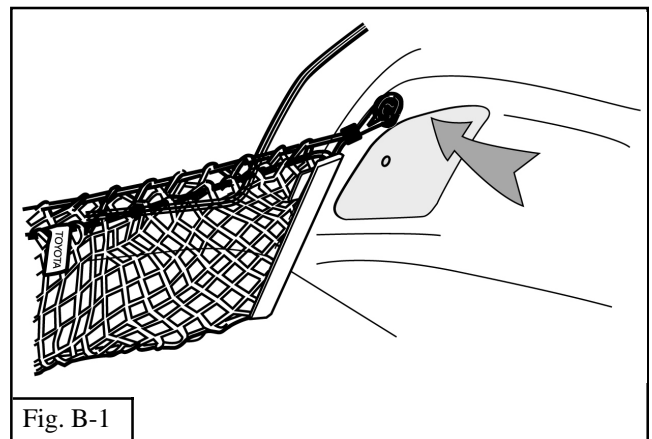



Section III – Functional Verifications

Check: _____

- “T” anchors properly installed

- Confirm that net is attached properly to anchor points in the vehicle and in correct orientation.

Look For: _____

“T” anchors are secure

Make sure loops are attached to upper T-Anchors and plastic handle faces rear of the vehicle