

Part Number: PT347-75100**Kit Contents**

Item #	Quantity Req'd.	Description
1	1	Convenience Net
2	1	Installation Instructions

Hardware Bag Contents

Item #	Quantity Req'd.	Description
1	N/A	N/A

Additional Items Required For Installation

Item #	Quantity Req'd.	Description
1	N/A	N/A

Conflicts

--

Recommended Tools

Personal & Vehicle Protection	Notes
Vehicle Protection	None
Special Tools	None
Installation Tools	None
Special Chemicals	None

General Applicability

--

Recommended Sequence of Application

Item #	Accessory

*Mandatory

NOTE: Part number of this accessory may not be the same as the part number shown.

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Req'd.	Description
1	N/A	N/A

Legend

STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.



OPERATOR SAFETY: Use caution to avoid risk of injury.



CAUTION: A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.



TOOLS & EQUIPMENT: Used in Figures calls out the specific tools and equipment recommended for this process.


Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-



- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).


Please see your Toyota dealer for a copy of this document.

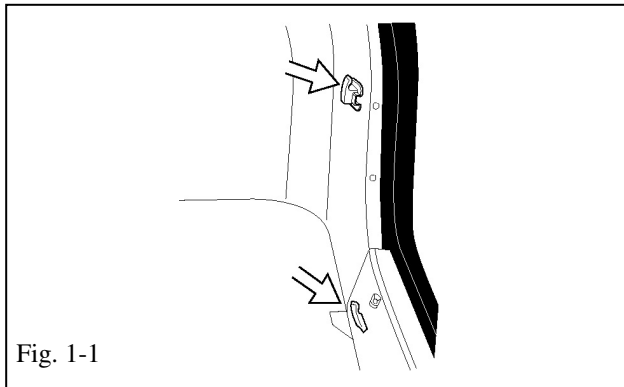


1. Installation of Cargo Net.

- (a) Open trunk, locate anchor locations on the passenger's side of the vehicle (Fig 1-1.)
- (b) Attach loop at the bottom of the net to the vehicle anchor as shown (Fig. 1-2). Repeat on opposite side.
- (c) Attach loop at the top of the net to the vehicle anchor as shown (Fig. 1-3). Repeat on opposite side.

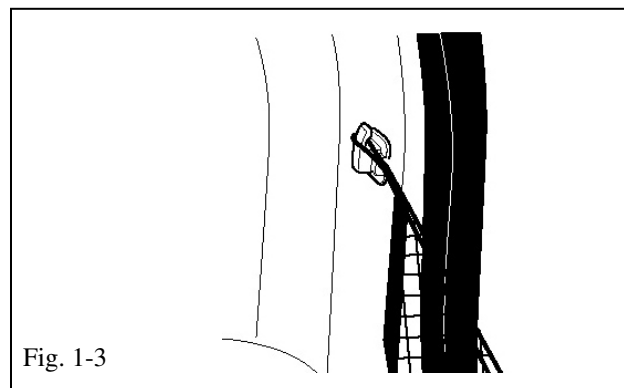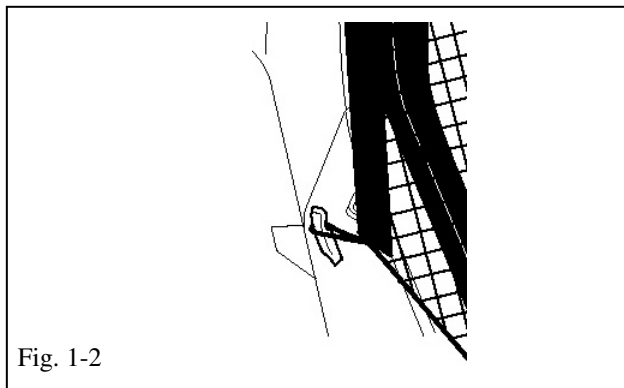

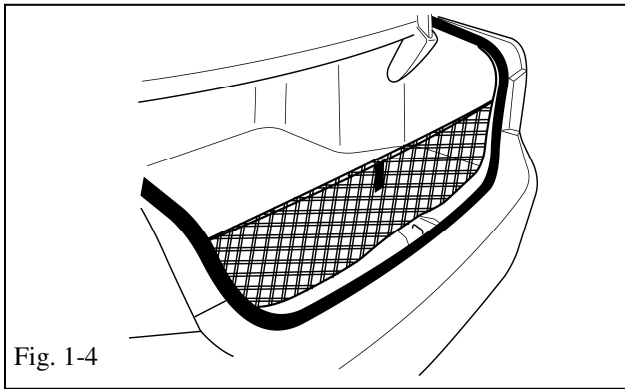

-  (d) Confirm completed assembly. Make sure net handle is facing out toward the rear of the vehicle (Fig. 1-4).

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

- ☐ Confirm that the net is attached properly to the anchor points in the vehicle.

Make sure loops are attached to the vehicle anchors at the top and bottom. The net handle should face out toward the rear of the vehicle.