

**Part Number: PT347-33130**

**Kit Contents**

Item #	Quantity Req.	Description
1	1	Convenience Net

**Hardware Bag Contents**

Item #	Quantity Req.	Description

**Additional Items Required For Installation**

Item #	Quantity Req.	Description

**Conflicts**

--

**Recommended Tools**

<b>Personal &amp; Vehicle Protection</b>	<b>Notes</b>
None	
<b>Special Tools</b>	<b>Notes</b>
None	
<b>Installation Tools</b>	<b>Notes</b>
None	
<b>Special Chemicals</b>	<b>Notes</b>
None	

**General Applicability**

--

**Recommended Sequence of Application**

Item #	Accessory


\*Mandatory


**NOTE:** Part number of this accessory may not be the same as the part number shown.


**Vehicle Service Parts** (may be required for reassembly)


Item #	Quantity Req.	Description


**Legend**


 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

 **OPERATOR SAFETY:** Use caution to avoid risk of injury.

 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

 **SAFETY TORQUE:** This mark indicates that torque is related to safety.

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-




- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).


Please see your Toyota dealer for a copy of this document.



### 1. Installation of Cargo Net.

- (a) Open trunk, locate anchor locations on the passenger's side of the trunk (Fig. 1-1).
- (b) Attach bag by inserting D-Ring into pocket located on bag and secure with Snap (Fig. 1-2).
- (c) Attach loop at the top of the net to the vehicle Grocery Hook as shown (Fig. 1-3).
- (d) Repeat steps 1(a) through 1(c) for the driver's side of the vehicle.

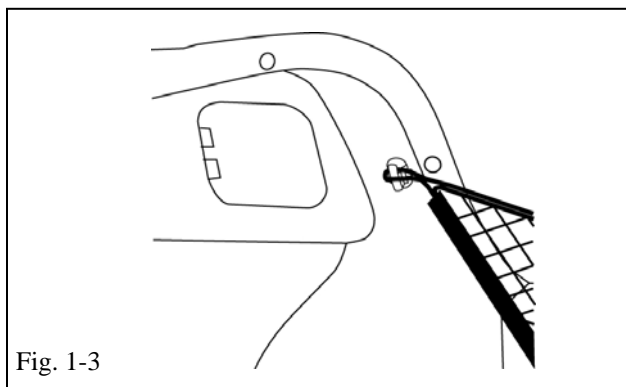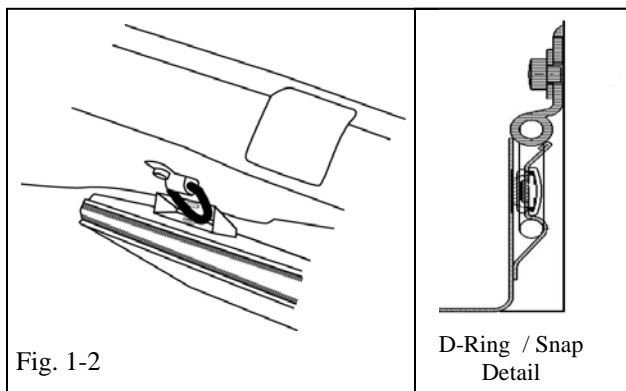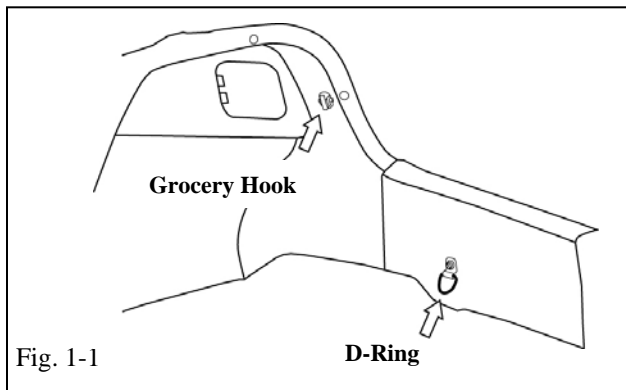

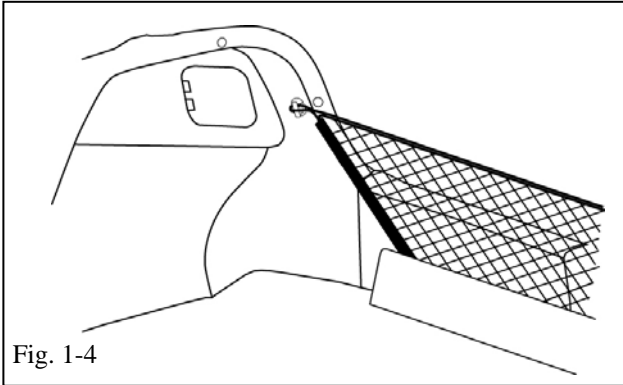

- (e) Confirm completed assembly. Make sure net handle is facing out toward the rear of the vehicle (Fig. 1-4).

Checklist - these points **MUST** be checked to ensure a quality installation.

Check:

Look For:

Accessory Function Checks

- Confirm that the net is attached properly to the anchor points in the vehicle

Make sure the loop is attached to the vehicle Grocery Hook at the top and the Snap pocket attached to the vehicle D-Ring at the bottom. The net handle should face out toward the rear of the vehicle.

Vehicle Function Checks

Vehicle Appearance Check

- After accessory installation and removal of protective cover(s), perform a visual inspection.

Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)