

Preparation

Part Number: PT347-30120

Kit Contents

Item #	Quantity Req'd.	Description
1	1	Convenience Net
2		
3		

Recommended Sequence of Application

Item #	Accessory
1	
2	
3	

*Mandatory

Hardware Bag Contents

Item #	Quantity Req'd.	Description
1		
2		
3		


Vehicle Service Parts (may be required for reassembly)


Item #	Quantity Req'd.	Description
1		
2		
3		


Additional Items Required For Installation


Item #	Quantity Req'd.	Description
1		
2		
3		


Legend


 **STOP:** Damage to the vehicle may occur. Do not proceed until process has been complied with.

 **OPERATOR SAFETY:** Use caution to avoid risk of injury.

 **CAUTION:** A process that must be carefully observed in order to reduce the risk of damage to the accessory/vehicle and to ensure a quality installation.

 **TOOLS & EQUIPMENT:** Used in Figures calls out the specific tools and equipment recommended for this process.

 **REVISION MARK:** This mark highlights a change in installation with respect to previous issue.

 **SAFETY TORQUE:** This mark indicates that torque is related to safety.

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	Notes
Special Tools	Notes
Installation Tools	Notes
Special Chemicals	Notes

General Applicability

All 2013 and newer GS Models

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.


This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).


Please see your Lexus dealer for a copy of this document.

1. Install the Cargo Net.


- (a) Open the trunk and locate the anchor locations on the passenger side of the vehicle (Fig. 1-1).

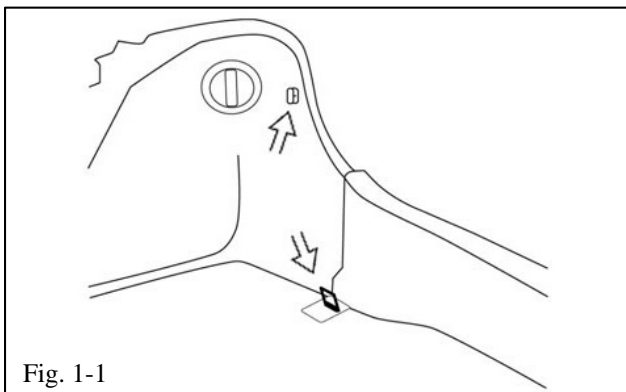

- (b) Attach the loop at the top of the net to the vehicle anchor (Fig. 1-2).

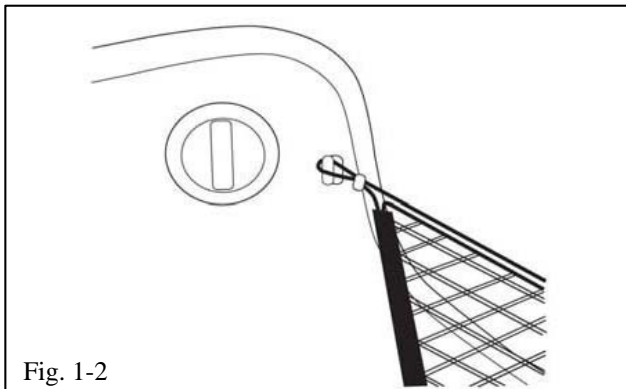

- (c) Attach the hook at the bottom of the net to the vehicle D-ring (Fig. 1-3).

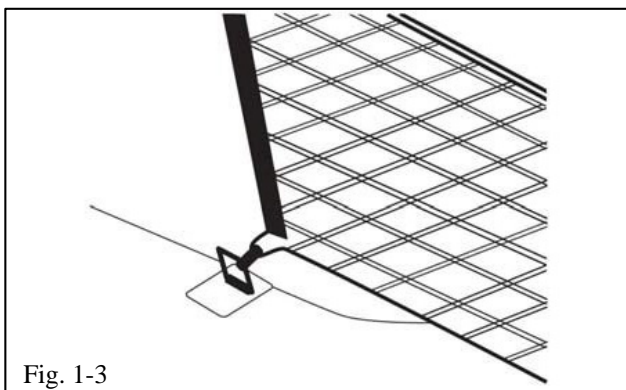

- (d) Repeat Steps 1(a) through 1(c) on the driver side of the vehicle.

Procedure

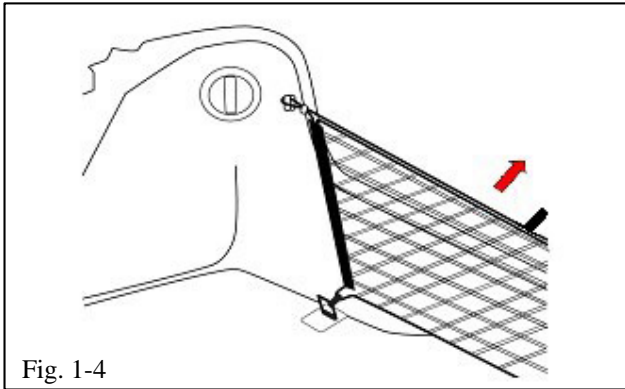


Fig. 1-4

- ⚠ (e) Confirm the completed assembly is installed correctly. Make sure the net handle is facing toward the outside of the vehicle (Fig. 1-4).

Checklist - these points **MUST** be checked to ensure a quality installation.

<u>Check:</u>	<u>Look For:</u>
<p><u>Accessory Function Checks</u></p> <p><input type="checkbox"/> Confirm that the net is attached properly to the anchor points in the vehicle</p>	<p>Make sure the loop is attached to the vehicle anchor at the top and the hook attached to the vehicle D-ring at the bottom. The net handle should face out toward the rear of the vehicle.</p>
<p><u>Vehicle Function Checks</u></p> <p><input type="checkbox"/></p>	
<p><u>Vehicle Appearance Check</u></p> <p><input type="checkbox"/> After accessory installation and removal of protective cover(s), perform a visual inspection.</p>	<p>Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)</p>