Preparation

Part Number: PT420-76110

Kit Contents

Item #	Quantity Reqd.	Description
1	1	First Aid Kit
2		
3		

Hardware Bag Contents

Item #	Quantity Reqd.	Description
1		
2		
3		

Additional Items Required For Installation

T		
Item #	Quantity Reqd.	Description
1		
2		
3		

Conflicts

None

Recommended Tools

Personal & Vehicle Protection	Notes
Blankets	Rear bumper protection
Special Tools	Notes
Installation Tools	Notes
Special Chemicals	Notes

General Applicability

All 2014 and newer IS models & 2015 and newer RC models

Recommended Sequence of Application


Item #	Accessory
1	
2	
3	

*Mandatory

Vehicle Service Parts (may be required for reassembly)

Item #	Quantity Reqd.	Description
1		
2		
3		

Legend

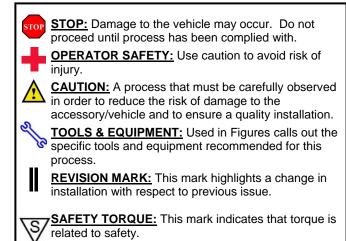

2014 -2015 -

Procedure

Care must be taken when installing this accessory to ensure damage does not occur to the vehicle. The installation of this accessory should follow approved guidelines to ensure a quality installation.

These guidelines can be found in the "Accessory Installation Practices" document.

This document covers such items as:-

- Vehicle Protection (use of covers and blankets, cleaning chemicals, etc.).
- Safety (eye protection, rechecking torque procedure, etc.).
- Vehicle Disassembly/Reassembly (panel removal, part storage, etc.).
- Electrical Component Disassembly/Reassembly (battery disconnection, connector removal, etc.).


Please see your Toyota dealer for a copy of this document.

1. Prepare the Vehicle.

- (a) Open the trunk.
- (b) Place vehicle protection over the rear bumper and trunk deck.

2. Install the First Aid Kit.

- (a) Remove the First Aid Kit from the polybag.
- (b) Locate the strapping on the right side of the trunk deck.
- (c) Loosen the strap latch.
- (d) Insert the First Aid Kit beneath the strapping.
- (e) Tighten the strap; ensure the latch is snug against the kit (Fig. 2-1).
- (f) Remove the vehicle protection.
- (g) Close the trunk.

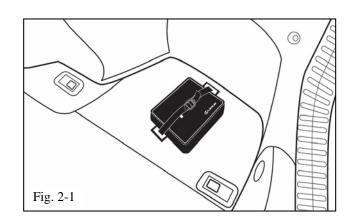

2014 -

IS

FIRST AID KIT

Checklist - these points MUST be checked to ensure a qu		
Check:	Look For:	
Accessory Function Checks		
Correct part number has been installed	Verify the part number on the package	
Confirm proper placement of First Aid Kit	The kit should lie flat in the rear with the "Lexus" name visible and upright	
	Verify the strap is secured over the First Aid Kit	
Vehicle Function Checks		
Vehicle Appearance Check		
After accessory installation and removal of protective cover(s), perform a visual inspection.	Ensure no damage (including scuffs and scratches) was caused during the installation process. (For PPO installations, refer to TMS Accessory Quality Shipping Standard.)	